


## MICROBAND APPLICATOR KIT TO FIT GRIMME TORNADO / MUSTANG STONE & CLOD SEPARATOR

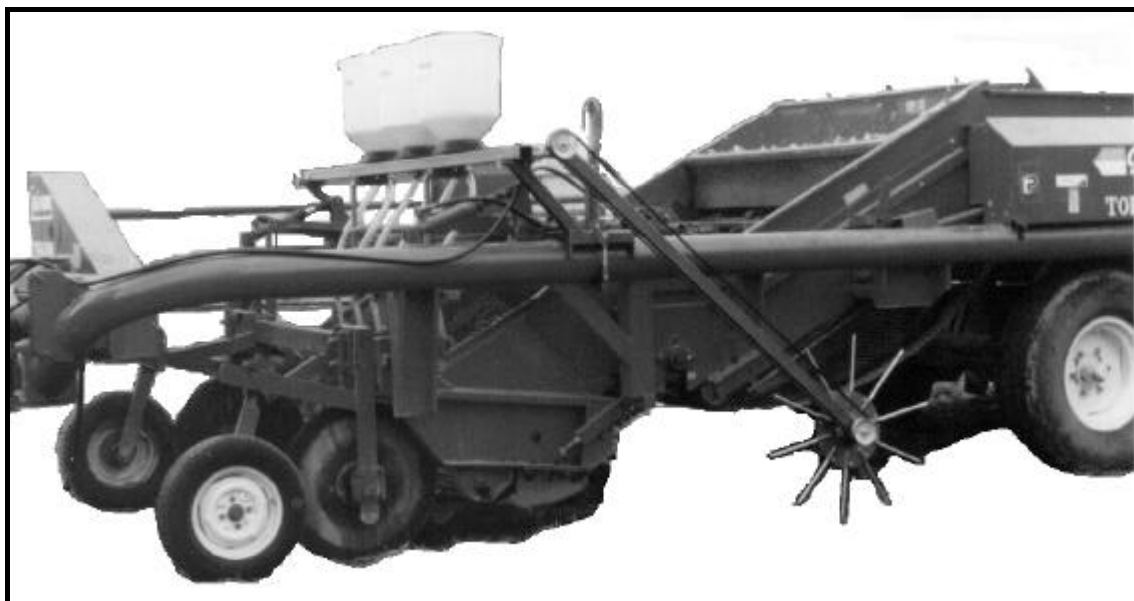

These kits have been designed to allow chemical microgranules to be applied and incorporated at the time of stone and clod seed bed preparation .

The chemical is broadcast via fishtail spreaders across the riddle bed width , fed from Microband 35 litre two outlet rectangular hopper units , which are driven by a spoked landwheel ,with a variable chain & sprocket drive to alter chemical application rates.

**A complete kit is supplied and ordered as follows in two parts :-**

**1/ Part No. 640155 Microband mounting bracket s, delivery equipment and landwheel drive kit , to fit Grimme Tornado / Mustang Stone & Clod separator.**

The above kits consists of all mounting brackets and fasteners , fishtail spreaders , delivery tubes and landwheel drive assembly complete with hydraulic landwheel lift and a variable drive to change application rates.

**2/ Microband 35 Litre 2- outlet Hopper Units x 3- off.**

\* The type required are to be stipulated by the customer , with regard to which type of metering rotor is required to apply a particular chemical / application rate . This information is supplied by the chemical manufacturer / distributor.

**\* If the type of rotor is not stipulated at the time of ordering supply the following :-**

760017 Microband 35 Litre 2-outlet rectangular hopper unit fitted with 2 x 5mm rotors per outlet.

\* SEE MICROBAND CATALOGUE FOR HOPPER UNIT FURTHER OPTIONS AVAILABLE. (Sample below.)

760174 Microband 35L 2 o.t. rectangular hopper unit fitted 1 x 14mm deep fluted rotor (9 deep flutes)

760173 Microband 35L 2 o.t. rectangular hopper unit fitted 1 x 15mm rotor (18 shallow flutes)

760175 Microband 35L 2 o.t. rectangular hopper unit fitted 2 x 14mm deep fluted rotor (9 deep flutes)

\* SEE MICROBAND CATALOGUE FOR HOPPER UNIT FURTHER OPTIONS AVAILABLE.

For spare parts details see instruction book part No. 032004